

# Trophy Building


## Determining Rod Length

Column Length + (Cap, Lid & Riser Height) = Rod Length


**Use Coupler to attach Rod to Figure**

*\*Height of Lids, Caps & Risers may vary  
Check Specifications in Catalog*

*TALL Bases may require a longer rod  
(BCB, RCB, CB & PED bases)*

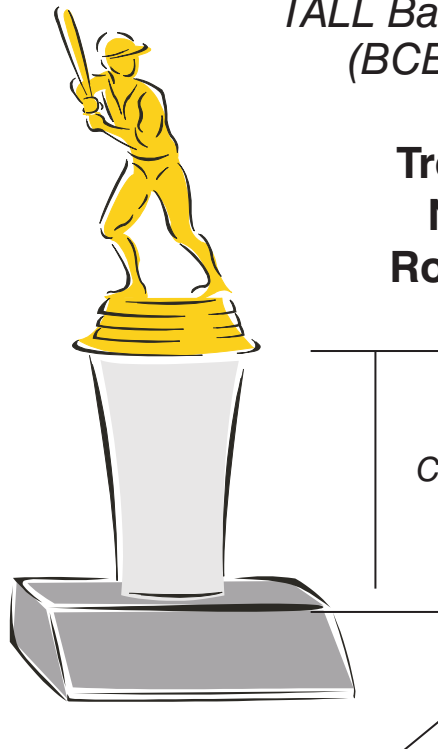

**Trophy Assembled with  
No Cap, Lid or Riser  
Rod Length would be 5\"/>**

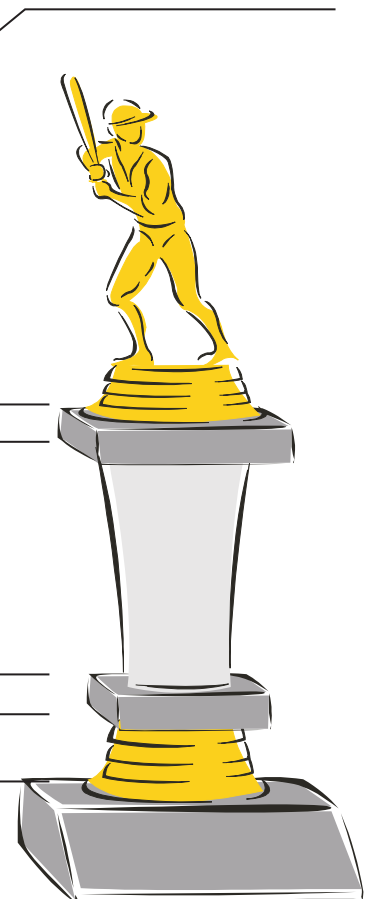

**Trophy Assembled with  
2 Lids and a Riser  
Rod Length would be 8\"/>**

**\*Lid Height - 3/4"**  
**Column Length - 5"**  
**\*Lid Height - 3/4"**  
**+ \*Riser Height - 1-1/2"**  

---

**Rod Length - 8"**

# Trophy Building

## Assembly

Fasten Rod to Figure stud using a Ferrule or Coupler  
Slide Rod thru Lid, Column, Lid Riser & Base  
Attach a Hexnut and Tighten

*\*When using a Check Ring instead of a Lid, slide the Check Ring onto the Figure stud BEFORE attaching the Ferrule.*

